 


creating history

In a world that is constantly moving,
motion is essential for the development of mankind.

There will be no motion without time,
and no time without motion.

Using motion in our watchwinders to keep time,
gives the ability to create history today.



ROTOR SELECTION & DISPLAY

Select the specific rotor to set your preferences. When the rotor is rotating the display shows "on".



ROTATION DIRECTION

Select the specific rotation direction. The available options are clockwise (right), counter-clockwise (left) and alternate (both directions).



START / STOP

Start or stop the specific rotor.



TURNS PER DAY (TPD)

Select the TPD according to the requirements of your automatic watch(es). The following TPD are available: 600 TPD - 900 TPD - 1200 TPD - 1500 TPD - 1800 TPD - 2100 TPD



LED LIGHTING

Turn LED lighting inside the watch winder on or off. The available colors are white, red, green and blue. Press for 3 seconds to turn off the LED lighting.




SPEED WINDING MODE

Select this function to speed-wind your automatic watch(es). The rotor rotates 240 rotations clockwise and 240 rotations counter-clockwise. After the total of 480 rotations the regular program is resumed.

START / STOP SYSTEM

When the door of the watch winder is opened, the rotors each stop in the 12 o'clock position. This allows you to place or remove watches safely and easily from the watch winder. When the door is closed the rotors will resume the selected program.

REMOTE CONTROL

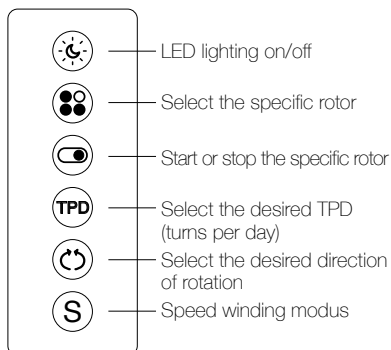

GENERAL INFORMATION

- The touchscreen of the watch winder turns off automatically if it is not used for more than 10 seconds. It is activated again by touching the touchscreen.
- The watch winder has a "power off memory function". After the power is disabled the watch winder will restore the set preferences when power is enabled.
- On the backside is a USB port. The USB function can be used to charge other devices such as a smart-watch, mobile phone, camera etc etc.

HINTS

- When the watch winder is functioning, please do not insert or remove watches. This can damage the motors and/or other mechanical and electronic parts. Wait until the specific rotor has stopped rotating before inserting or removing a watch.
- Please use the original adapter. Use of any other adapter may lead to a defect in the electronic system.
- Close the watch winder door to avoid external influences (dust, humidity etc etc) and keep your watches safe by clicking the watch holder inside the watch winder.