

# Instruction For S002

## 1. To open:

The factory setting management code is 1234, the factory setting user code is 123456, no fingerprints registered in the factory, thus any fingerprint can open a new lock.

factory setting unlocking mode is by user code or fingerprint.

### A. Single user code or fingerprint mode:

(1) By user code: Press “\*” , then input your code, and press “#” to confirm ,the locker will be opened.

(2) By fingerprint: Put your finger on the reader until the open mark on the screen displays, now the lock has been opened.

B. User code plus fingerprint mode: press “\*” , then input your code and press “#” to confirm, now put your finger on the reader until the open mark on the screen displays, now the lock has been opened.

**Please note: In any mode, you can use the management code to open the lock.**

## 2. To set:

Press “#” for 2 seconds until “Authority Verify” displays, input user code or finger or code plus finger to verify (when inputting code, please press “#” to confirm. In any unlocking mode, you can use management code to verify), then the screen displays the below menu:

1. Register fingerprints
2. Delete fingerprints
3. Change the code
4. Unlocking mode
6. System initializing
7. Others
8. Quit

press the number to enter the right function, press “\*” to turn back, press “0” to flip over. if confirmation needed, pressing “#”

## 3. To register fingerprints:

A. Follow step 2 to enter the right function.

B. Put your finger on the reader, when a beep sounds, take away your finger.

C. One second later, put the same finger on the reader for a second time, when a beep sounds, take away your finger.

D. One second later, put the same finger on the reader for a third time, when the screen displays “success” , the fingerprint has been successfully registered.

### **Please note:**

Totally 30 fingerprints can be registered in the system, in case the system is fully registered, please delete all the fingerprint for registering a new one if needed.

Three times inputting of your fingerprint is needed for registering. Each time you should input different part of your fingerprint, and front,middle and rear part of the fingerprint for each time is suggested.

**4. To delete fingerprints:**

- A. Follow step 2 to enter the right function.
- B. press “#” to delete all the fingerprints.

**5. To Change user code:**

- A. Follow step 2 to enter the right function.
- B. Input your new code(4 to 10 digits),press “#” to confirm, “AGAIN” displays, input the code for a second time and press “#” to confirm.

**6. To set unlocking mode:**

- A. Follow step 2 to enter the right function.
- B. Two unlocking modes display: 1.code or fingerprint. 2.code and fingerprint.
- C. Press the right No. to change the mode.

**7. To initialize the system:**

- A. Follow step 2 to enter the right function.
- B. Press “#” to initialize the system. now the system has been initialized, all the fingerprints have been deleted, the code returns back to factory setting code, the opening mode returns back to code or fingerprint.

**8. Others:**

Follow step 2 to enter the right function.

- A. To match the panel with the lock body: in case the panel is replaced with a new one, the new panel will not match the old lock body,please use this function.
- B. Code hidden function open or shut: the code will displays or not displays on screen.
- C. If you want to change the management code, you will have to set the lock by original management code. Follow step 2 to enter the right function, input your new management code(4 to 10 digits), press “#” to confirm, “AGAIN” displays, input the code for a second time and press “#” to confirm.