

# SECURITY SAFE OWNER'S MANUAL

Thank you for choosing our security safe to store your valuables.

**Note:** In emergency, the safe can be opened by the override key.

DO NOT store your override key inside the safe.

**Parts:** Instruction sheet, 1pc bottom mat, 2pcs override keys, 2pcs anchoring bolts

## **Opening Your Safe for The First Time (Using the Override Key)**

- 1.Remove the override key cover; insert the key into the keyhole and gently turn it to unlock the safe.
- 2.With the door open, remove the battery compartment cover located on the inside of the door, install 4\*AA batteries.
- 3.Take out the key and install the key cover on.

## **Setting the Password and Fingerprints (Factory Default Password 1-6-8)**

Please register your own password and fingerprints before using the safe, always test the new password / fingerprints before storing any valuables inside the safe.

### **Password Programming (Code length: 3-8 digits)**

- 1.Input: 0-0 on the keypad and press the set button, lock will “Beep” 2 times;  
Input: Your new password-E;
- 2.Input: Your new password -E again, the green light and two beeps sound indicates a new password has been set successfully; failed to follow the steps would cause four beeps sound and red light on, please try again.

### **Fingerprint Programming (Max. 9 fingerprints can be added)**

- 1.Press the set button, lock will “Beep” 2 times;
- 2.Choose one fingerprint number from 1-9; then put a fingerprint on the scanner four times, the green light and two beeps sound indicates a new password has been set successfully.
- 3.Failed to follow the steps would cause four beeps sound and red light on, please try again.

### **Unlocking Your Safe**

- 1.Input your own password and press “E” to confirm, then turn the knob clockwise to unlock the safe.
- 2.If you make a mistake while entering the password, press “C” to re-enter and “E” to confirm.
- 3.Scan registered fingerprint, then turn the knob clockwise to unlock the safe.

## **Locking Your Safe**

1. With the bolts retracted into the door, firmly close the door of the safe.
2. Turn the knob in the counter-clockwise direction to secure your safe.

## **Wrong Password / Fingerprint Entry Warning**

Three times invalid password / fingerprint input would lockdown the keypad for 15 seconds; continuous three times wrong entry would lockdown for 5 minutes; another three times wrong entry would lockdown for 15 minutes.

## **Resetting Your Safe**

1. Press and hold the setting button at least 3 seconds, with a long beep and the green light on, the safe has returned to factory default mode.
2. In factory default mode, password "1-6-8" would open the safe.

## **Other Functions**

### **Low Battery Warning**

If the battery running low, keypad beeps and the red & green light flashes while unlocking the safe. Please replace new batteries.

### **Power-off Protection**

The keypad will always remember the registered password and fingerprints, even run out battery.

### **Bolt-Down Instructions**

To help provide maximum security, it is highly recommended that you bolt down your safe:

1. Set the safe in the place you intend to bolt it down and open the door.
2. Using a pencil mark the floor through the holes provided in the bottom or back of your safe.
3. Move the safe away and drill holes of the appropriate diameter and depth for the type of hardware being used and the mounting surface, place the safe back over the holes and install the fasteners as required.

**Note:** It is not recommended to attempt to bolt your safe to both the floor and wall. If bolting to a wall, please ensure the safe is resting on a supporting surface such as a table or shelf.